

pottery barn teen

EMERSON BUNK BED FULL OVER FULL

 **WARNING:** Failure to follow these warnings and assembly instructions could result in serious injury or death. To help prevent serious or fatal injuries from entrapment or falls:

- Read all instructions before assembling bunk bed.
- Before each usage or assembly, inspect bunk bed for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use bunk bed if any parts are missing or broken.
- DO NOT use substitute parts. Contact Pottery Barn Kids for replacement parts and instructional literature if needed.
- Follow the information on the warnings appearing on the upper bunk end structure and on the carton. DO NOT REMOVE WARNING LABEL FROM BED.
- Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- Ensure thickness of mattress does not exceed 9 inches and the surface of mattress must be at least 5 inches (127 mm) below the upper edge of guardrails.
- Use only mattress which is 74"-75" long and 52.5"-53.5" wide on upper bunk.
- Do not allow children under 6 years of age to use the upper bunk.
- Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- Prohibit more than one person on the upper bunk.
- Always use the ladder for entering and leaving the upper bunk.
- Use of a night light may provide added safety precaution for a child using the upper bunk.
- Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- The use of water or sleep flotation mattresses is prohibited.
- If refinishing, use a non-toxic finish specified for children's products.

STRANGULATION HAZARD - Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

04-000066-3

PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- For your safety and ease, assembly by two adults is recommended.
- Remove all parts and hardware from box and lay out on a carpeted or scratch-free work surface, as this will avoid damaging any parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists to identify and separate each of the pieces included.
- Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.
- The use of power tools for assembly is not recommended. Power tools can damage hardware or split wood.

PARTS INCLUDED

Part Included Box 1:

1. Upper End Panel (2x)

Part Included Box 2:


2. Lower End Panel (2x)
 7. Wood Block Without Holes (4x)
 Wood Block With holes (4x)

Part Included Box 3:





3. Side Rails (4x)
 4. Long Guard Rail (1x)
 5. Short Guard Rail (1x)

Part Included Box 4:

6. Ladder (1x)
 8. Roll Slats (2x)

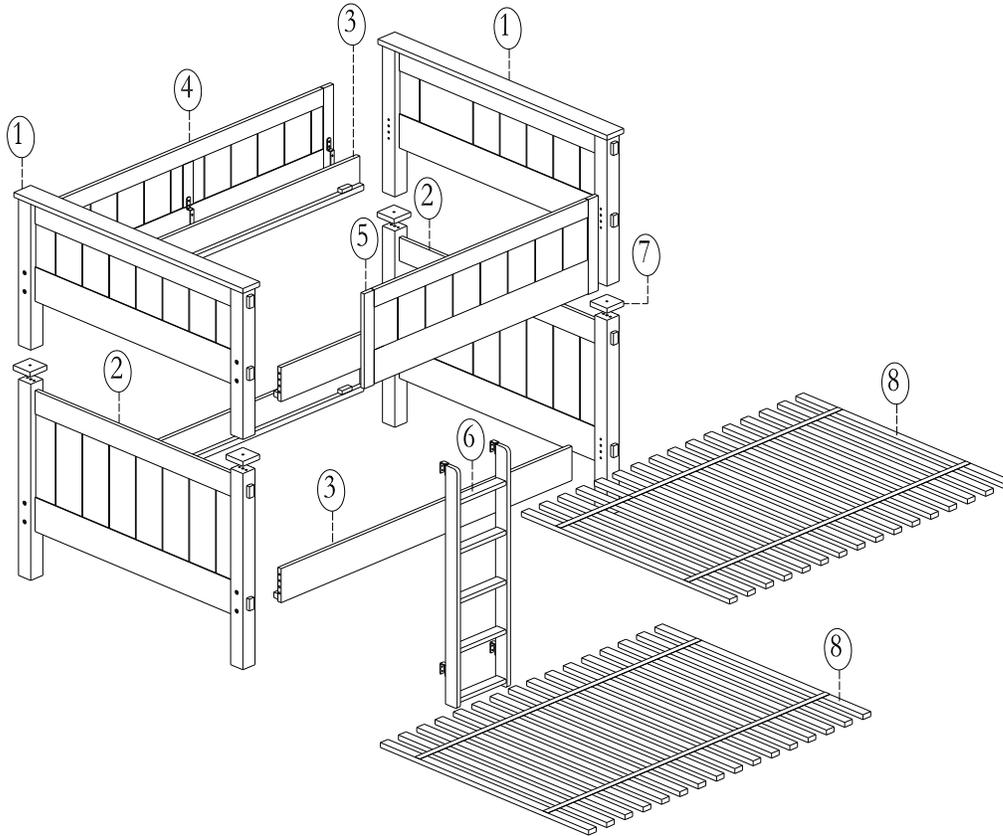


HARDWARE ENCLOSED

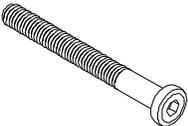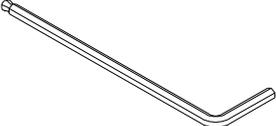(A) Barrel nut-16 pc	(B) Long Allen bolt M8x120 mm – 16 pc	(C) Allen key – 1 pc	(D) Metal plate – 5 pc	(E) Short Allen bolt M6x20 mm - 10 pc
				
(F) Medium screw M6x3/4" – 15 pc	(G) Long screw M8x1 1/4" - 64 pc	(H) Metal dowel-M10x125 mm - 4 pc	(I) Short Screw M6 x 1/2" - 4 Pc	(J) Wooden Dowel M10 x 40 – 16 Pc
				



TOOLS REQUIRED:

Phillips head screwdriver (not included)


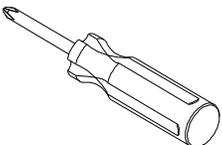


ASSEMBLY INSTRUCTIONS


1. Insert the barrel nut (A) and wooden dowel (J) into pre-drilled holes at two ends of side rails (3).

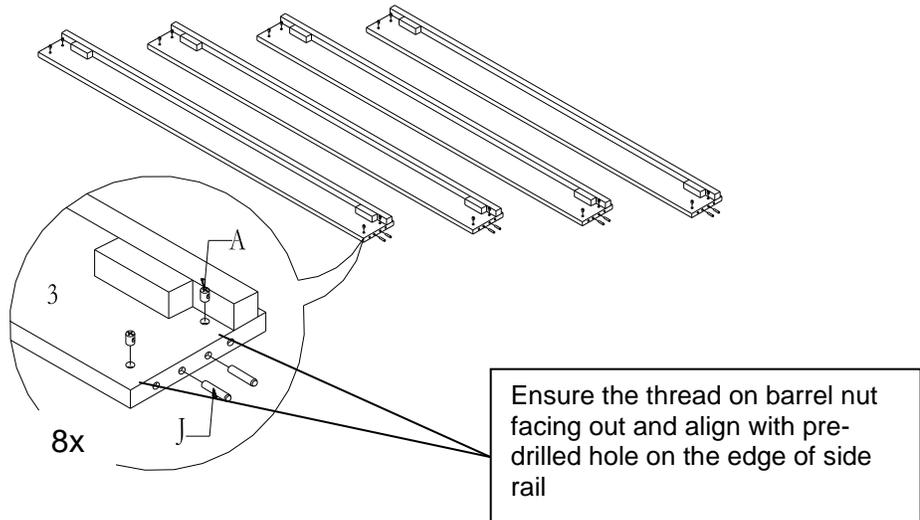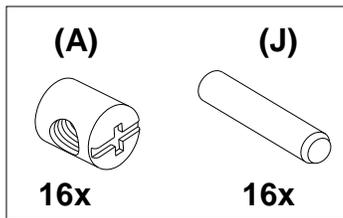


2. Attach the side rail (3) to the lower end panels (2) by aligning the pre-drilled holes on the side rail (3) with pre-drilled holes on the post of end panels (2). Secure by the long Allen bolts (B) into the barrel nuts (A) that has just been inserted in step 1 using Allen key (C).

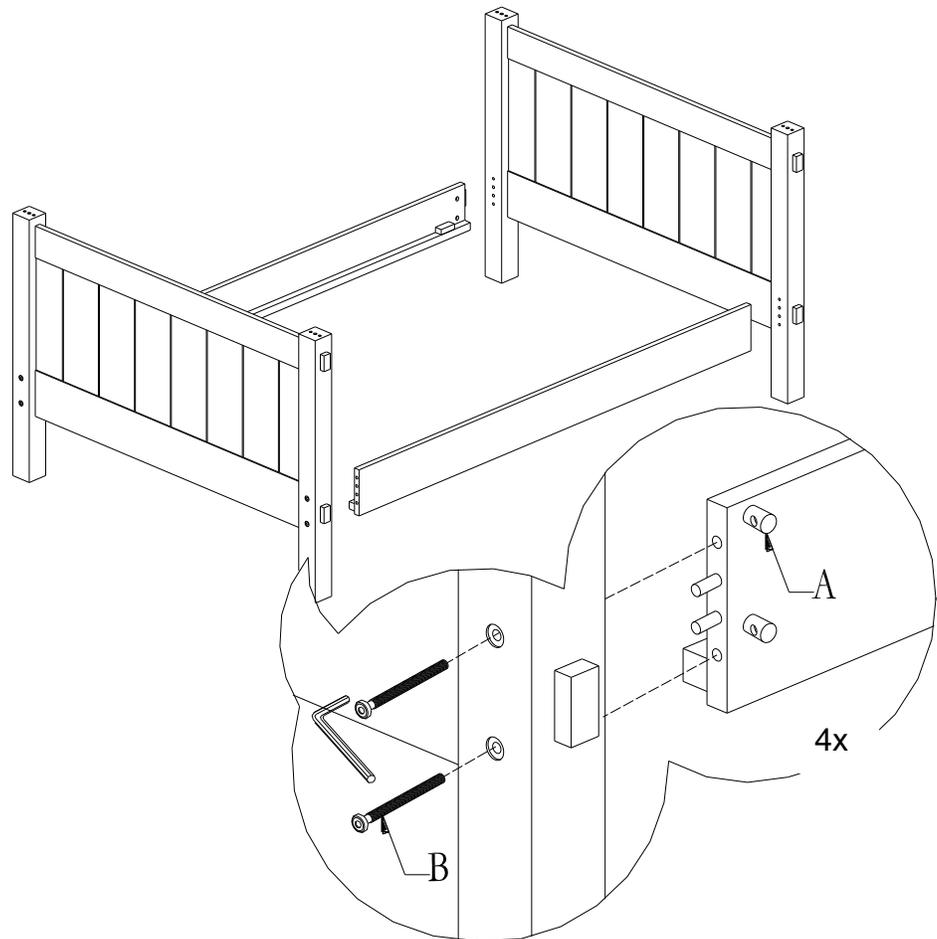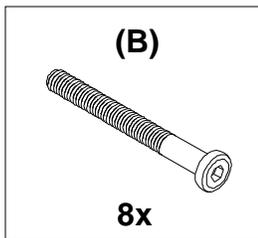



3. Roll out the slat roll (8) onto the support rail on the inner side of side rail (3). Secure each slat by long screw (G) at two ends using a Phillips head screwdriver (Not Included). Repeat step 2 to attach the side rail (3) to the upper end panel (2).

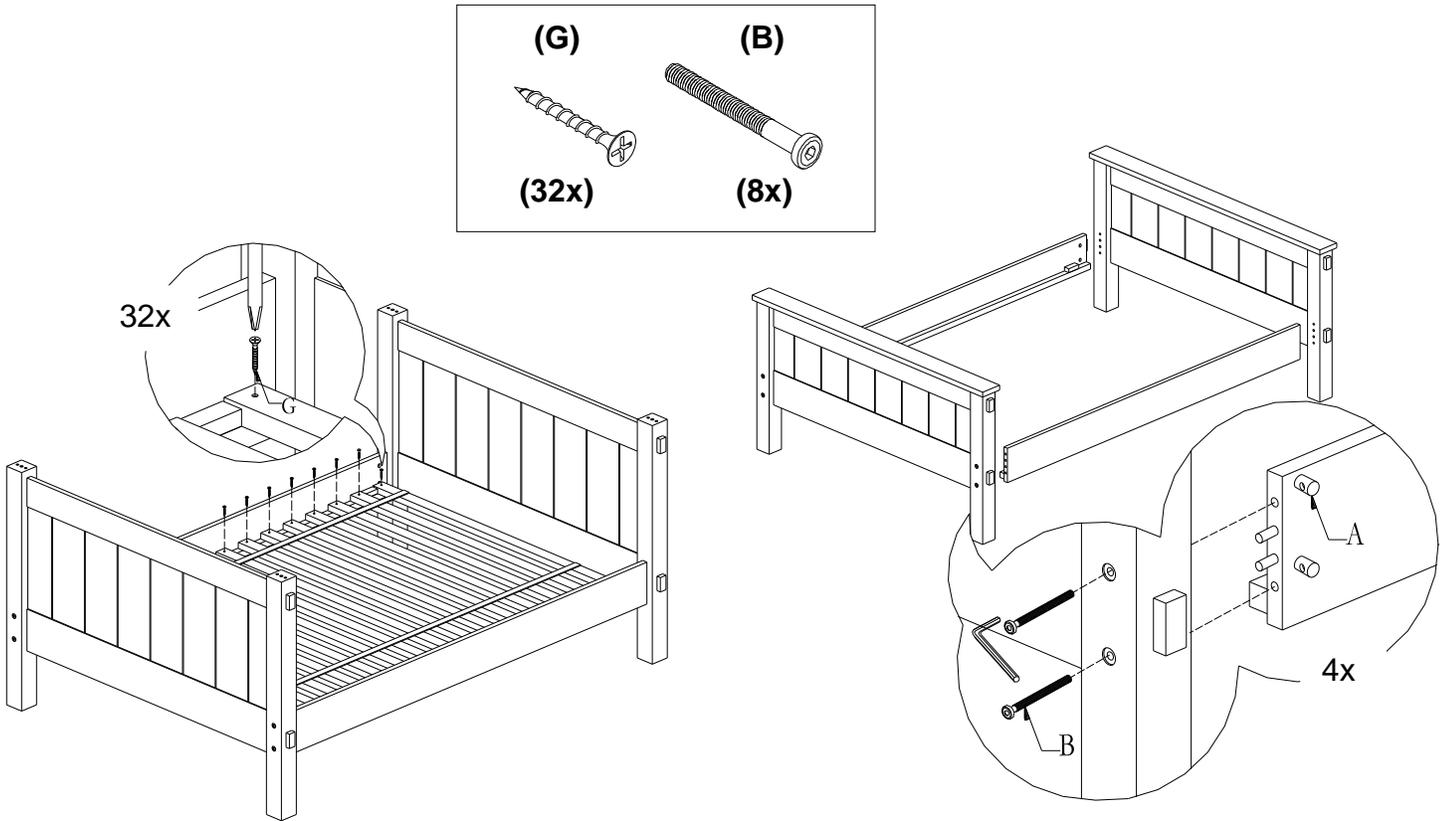



4. Attach the metal bracket (D) onto the vertical rails of long and short guard rail (4&5). Secure by short Allen bolts (E) using Allen key (C). Attach the guard rail (4&5) onto the side rail (3) of upper bed by slotting the metal bracket (D) onto the inner side of side rail (3). Secure each metal bracket (D) to the side rail with medium screw (F) using a Phillips head screwdriver and insert the short Allen Bolts (E) through the holes on the metal plate (D), tighten with the Allen Key.

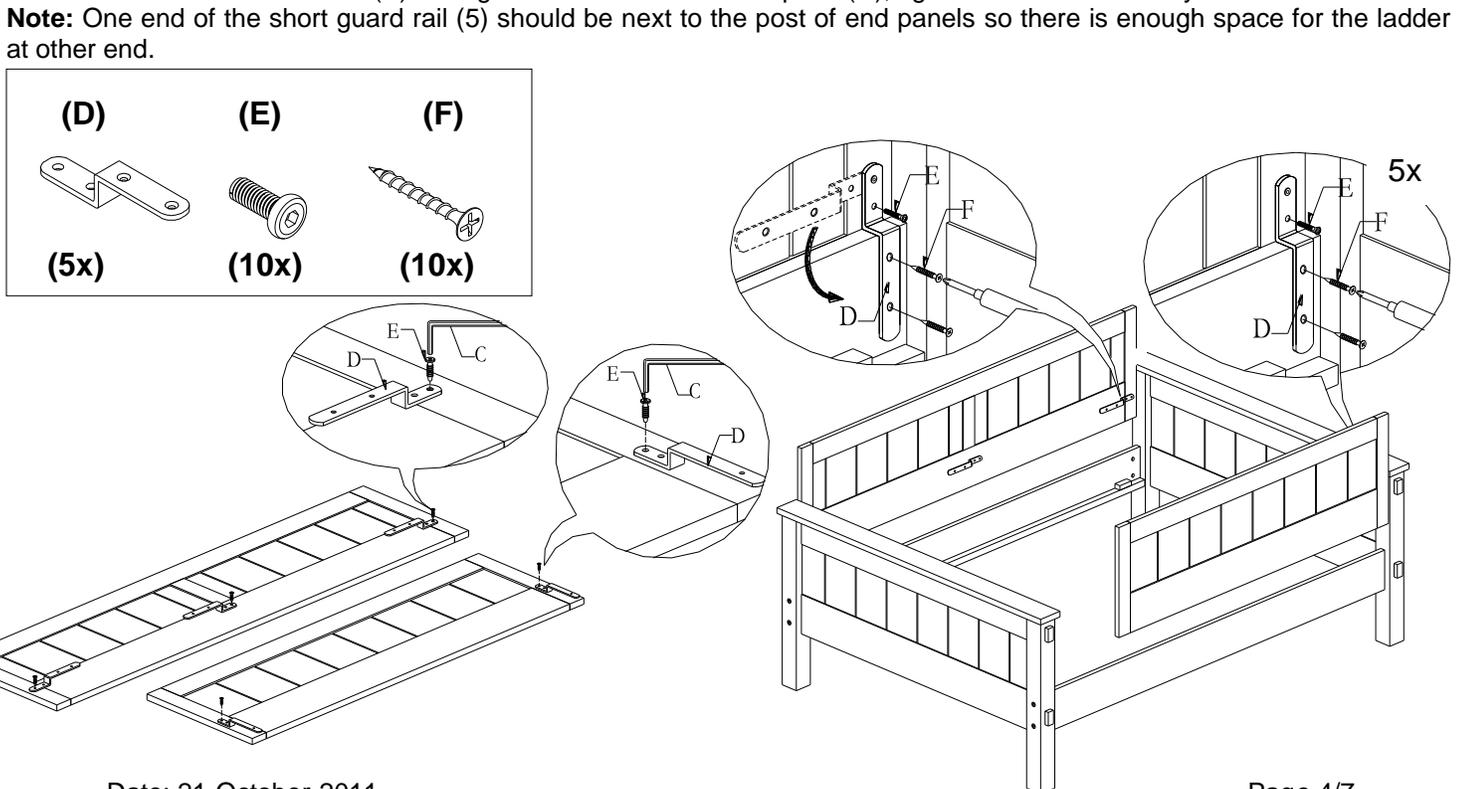


5. Roll out the slat roll (8) onto the support rail on the inner side of side rail (3) of upper bed. Secure each slat by long screw (G) at two ends using a Phillips head screwdriver (Not Included).

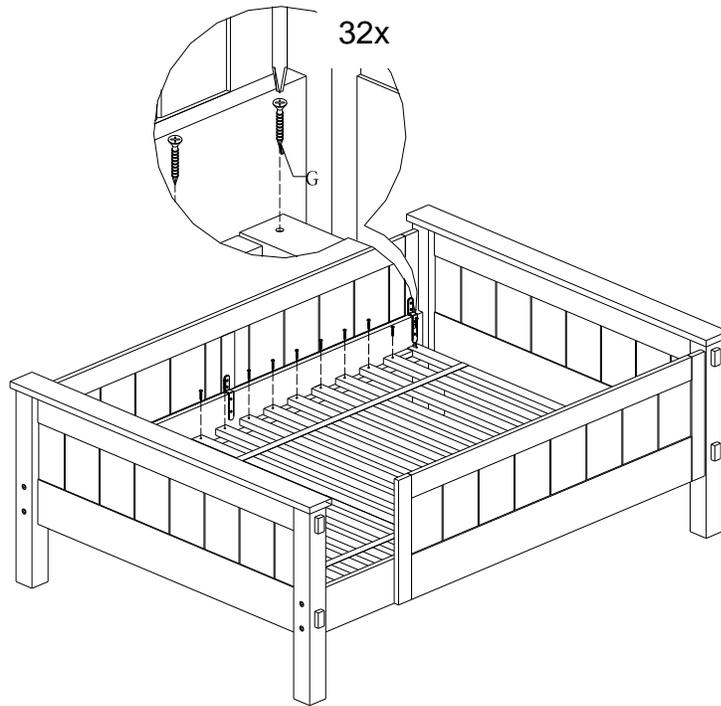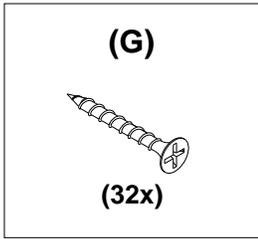





6. Attach the wood block (7) to the top post of lower end panels (2) by inserting wooden dowel on the wood block (7) into the top holes post of the lower end panels (2). Insert the metal dowels (H) through the holes on the wood block (7).

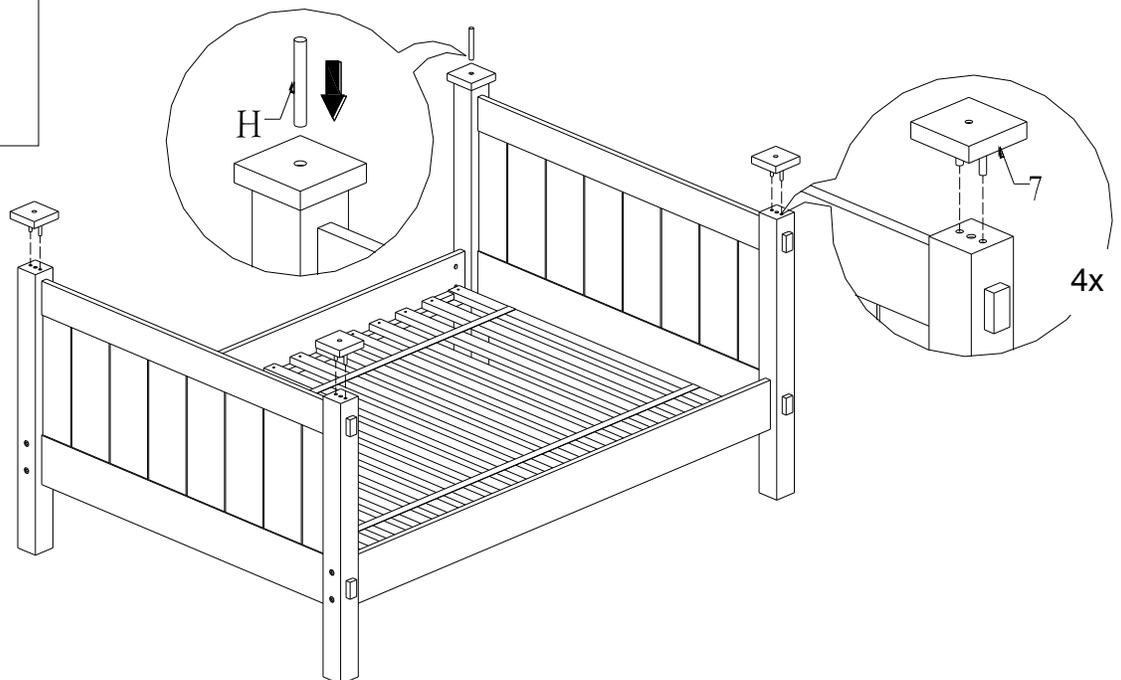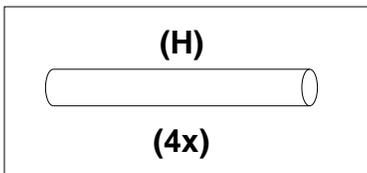



7. Place the upper bed onto the lower bed by aligning the pre-drilled holes on the bottom post of upper end panels (1) with metal dowels (H) that has just been installed on the lower bed end panel (2).

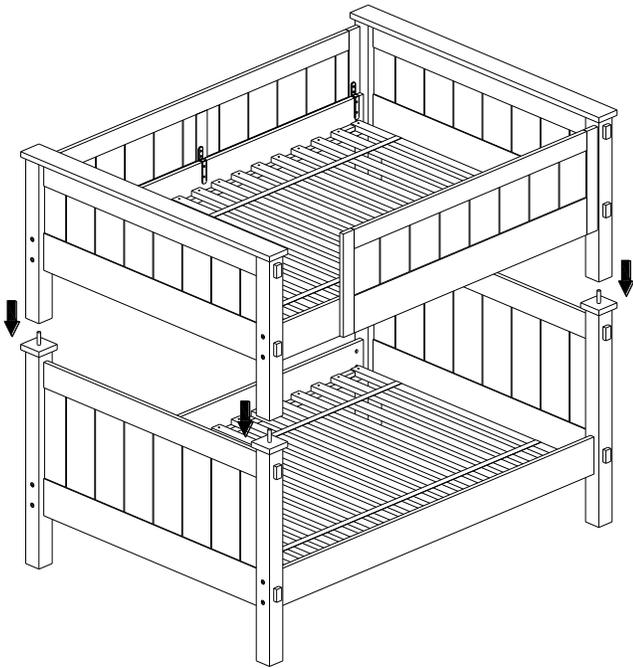

8. Slot the pre-fixed metal bracket on the ladder (6) onto the side rail (3) of upper bed. Secure the ladder (6) to the side rail (3) by short screw (I) at the center hole of metal brackets.

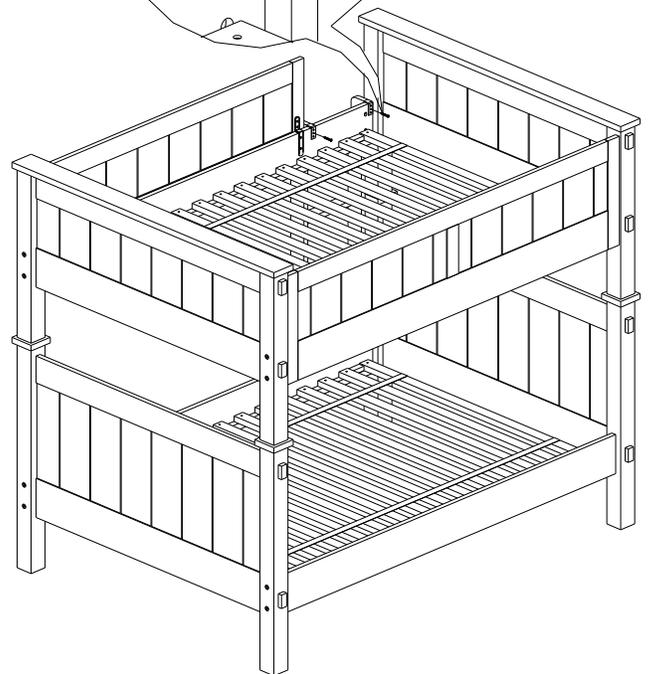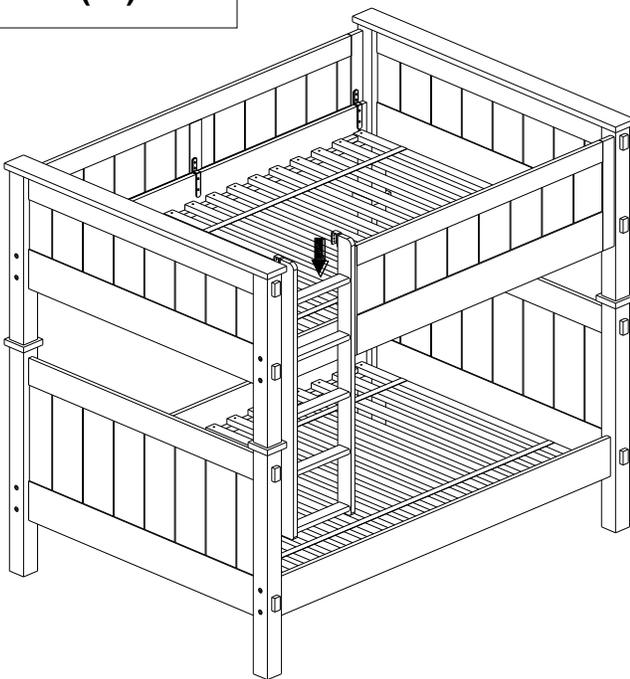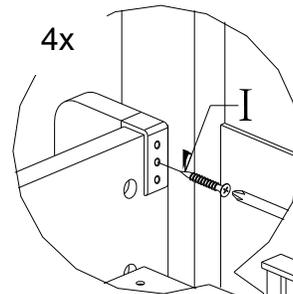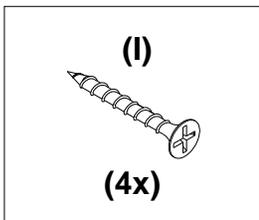


9. Turn the pre-installed mending plate under the horizontal rail of long and short guard rail (4&5) over the side rail (3). Secure the mending plate with side rail (3) by medium screws (F).

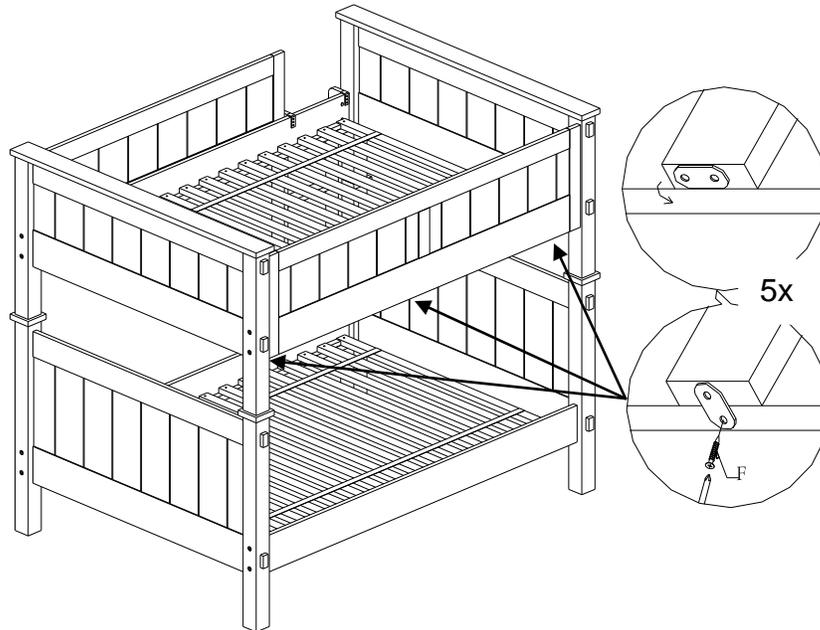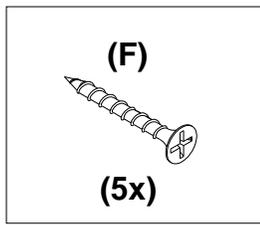

Optional the assembly for single bed Full – Full size used:

10. Release the ladder (6) from the bunk bed then remove the upper bed from the lower bed.
11. Release the guard rail (4&5) from the upper bed.
12. Release one panel of the lower bed.
13. Release one panel of the upper bed.
14. Assemble the panel of the lower bed (that was released on point no 12) to the upper bed. The panel of lower bed will be as the headboard.
15. Assemble the panel of the upper bed (that was released on point no 13) to the lower bed. The panel of lower bed will be as the headboard.
16. Release the wood blocks with the hole and then attach the wood blocks without hole to the headboard.

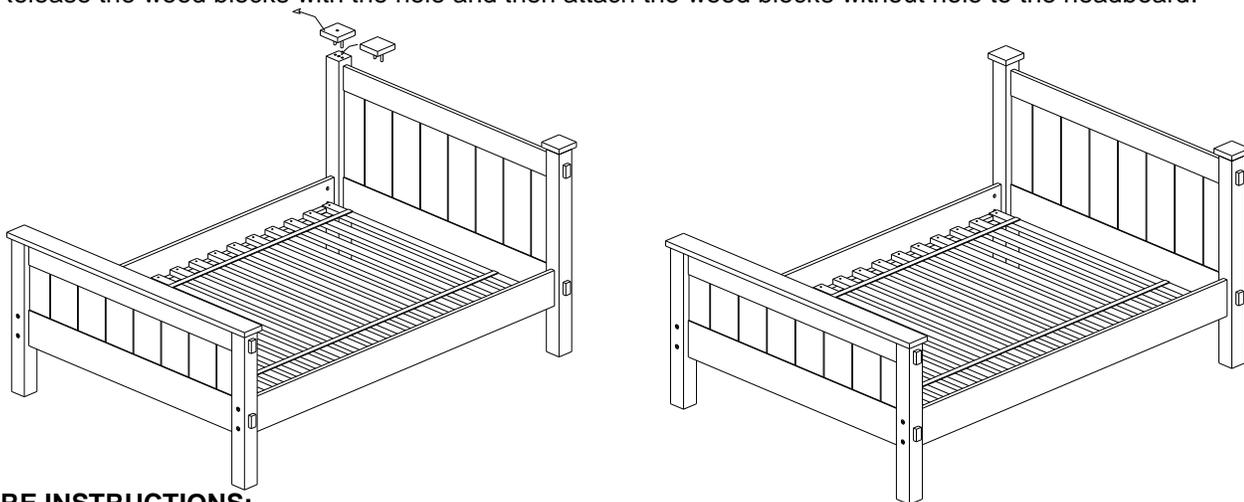

CARE INSTRUCTIONS:

- Dust often using a clean, soft, dry lint-free cloth.
- Blot spills immediately, and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish.
- Check fasteners periodically for tightness. **Do not over tighten.** This may cause distortion or breakage.
- Parents should ensure a safe environment for the child by checking regularly, before placing the child on the product, that every component is properly and securely in place.

Thank you for your purchase
 stores | catalog | www.pbteen.com
 USA 1.800.290.8181